

ID	Brand	Description	Part Nr	Quantity
3762342	ASUS	ASUS KEYBOARD AZERTY OKNO-J71BE03	OKNO-J71BE03	1
3762348	DELL	DELL KEYBOARD AZERTY BE ORWJK6	ORWJK6	1
3762353	DELL	DELL KEYBOARD AZERTY BE ORX801	ORX801	1
3760690	DELL	DELL KEYBOARD AZERTY BE OUC146	OUC146	1
3760771	DELL	DELL KEYBOARD AZERTY BE OWP238	OWP238	63
3762350	DELL	DELL KEYBOARD AZERTY BE PK130FN1D20	PK130FN1D20	1
3760628	DELL	DELL KEYBOARD AZERTY FR 02Y8J6	02Y8J6	78
3760222	DELL	DELL KEYBOARD AZERTY FR 09DTC7	09DTC7FR	60
3760631	DELL	DELL KEYBOARD AZERTY FR 0G2WN1	0G2WN1	116
3760629	DELL	DELL KEYBOARD AZERTY FR 0HW366	0HW366	45
3760153	DELL	DELL KEYBOARD AZERTY FR 0NU965	0NU965	1
3760693	DELL	DELL KEYBOARD AZERTY FR 0R360P	0R360P	5
3760688	DELL	DELL KEYBOARD AZERTY FR 0RK696	0RK696	72
3760689	DELL	DELL KEYBOARD QWERTY ESP 0UK937	0UK937	11
3760687	DELL	DELL KEYBOARD QWERTY IT 0FU947	0FU947	1
3760220	DELL	DELL KEYBOARD QWERTY TR 0UK947	0UK947	1
3760692	DELL	DELL KEYBOARD QWERTY UK 0RX221	0RX221	3
3760630	DELL	DELL KEYBOARD QWERTY UK 0X274M	0X274M	69
3760694	DELL	DELL KEYBOARD QWERTZ CH 0H4403	0H4403	1
3760691	DELL	DELL KEYBOARD QWERTZ DE 0WP242	0WP242	2
3762108	HP	HP KEYBOARD AZERTY 419171-A41	419171-A41	3
3762171	HP	HP KEYBOARD AZERTY 456624-181	456624-181	1
3762179	HP	HP KEYBOARD AZERTY 485424-181	485424-181	16
3762170	HP	HP KEYBOARD AZERTY 578364-A41	578364-A41	3
3762181	HP	HP KEYBOARD AZERTY 588115-051	588115-051	20
3762180	HP	HP KEYBOARD AZERTY 588115-A41	588115-A41	20
3762235	HP	HP KEYBOARD AZERTY 610914-A41	610914-A41	3
3762109	HP	HP KEYBOARD AZERTY 617384-A41	617384-A41	4
3762110	HP	HP KEYBOARD AZERTY 622344-A41	622344-A41	3
3762238	HP	HP KEYBOARD AZERTY 634016-A41	634016-A41	1
3762237	HP	HP KEYBOARD AZERTY 697685-061	697685-061	2
3762102	HP	HP KEYBOARD AZERTY 698694-051	698694-051	3
3762321	HP	HP KEYBOARD AZERTY 699146-A41	699146-A41	1
3762101	HP	HP KEYBOARD AZERTY 701976-051	701976-051	1
3762236	HP	HP KEYBOARD AZERTY 701988-051	701988-051	8
3762104	HP	HP KEYBOARD AZERTY 731179-A41	731179-A41-REF	5
3762107	HP	HP KEYBOARD AZERTY 738688-051	738688-051	2
3762173	HP	HP KEYBOARD AZERTY 742110-A41	742110-A41	1
3762182	HP	HP KEYBOARD AZERTY ARA 642760-DW1	642760-DW1	18
3762103	HP	HP KEYBOARD AZERTY ARA 702651-FP1	702651-FP1	1
3761143	HP	HP KEYBOARD AZERTY BE 441427-A41	441427-A41	1
3762232	HP	HP KEYBOARD AZERTY BE 444340-A41	444340-A41	11
3761148	HP	HP KEYBOARD AZERTY BE 448615-021	448615-021	1
3762228	HP	HP KEYBOARD AZERTY BE 450472-A42	450472-A42	16
3762230	HP	HP KEYBOARD AZERTY BE 483275-A41	483275-A41	16
3762186	HP	HP KEYBOARD AZERTY BE 605814-DW1	605814-DW1	18
3762185	HP	HP KEYBOARD AZERTY BE 608769-A41	608769-A41	48
3762229	HP	HP KEYBOARD AZERTY BE 635318-A41	635318-A41	7
3761607	HP	HP KEYBOARD AZERTY BE 698680-A41	698680-A41 REF	1
3761606	HP	HP KEYBOARD AZERTY BE 698682-A41	698682-A41 REF	2
3761164	HP	HP KEYBOARD AZERTY BE 720244-A41	720244-A41 REF	4
3761612	HP	HP KEYBOARD AZERTY BE 721953-A41	721953-A41 REF	1
3761600	HP	HP KEYBOARD AZERTY BE 730794-A41	730794-A41	1
3761156	HP	HP KEYBOARD AZERTY BE AEAT5B00210 441541-A41	AEAT5B00210-441541	2
3761162	HP	HP KEYBOARD AZERTY BE PK13CL331E0 337016-181	PK13CL331E0 337016-	1
3762105	HP	HP KEYBOARD AZERTY FR 708135-051	708135-051-REF	1
3762231	HP	HP KEYBOARD AZERTY FR 493960-051	493960-051	10
3762168	HP	HP KEYBOARD AZERTY FR 495406-181	495406-181	1
3762178	HP	HP KEYBOARD AZERTY FR 537583-A41	537583-A41	9

3762233	HP	HP KEYBOARD AZERTY FR 589301-051	589301-051	142
3762175	HP	HP KEYBOARD AZERTY FR 605052-A41	605052-A41	5
3762169	HP	HP KEYBOARD AZERTY FR 605922-051	605922-051	1
3762184	HP	HP KEYBOARD AZERTY FR 638286-051	????638286-051	50
3762172	HP	HP KEYBOARD AZERTY FR 652533-051	652533-051	1
3761603	HP	HP KEYBOARD AZERTY FR 652682-051	652682-051 REF	1
3762234	HP	HP KEYBOARD AZERTY FR 697459-A41	697459-A41	1
3761605	HP	HP KEYBOARD AZERTY FR 700273-051	700273-051	3
3762174	HP	HP KEYBOARD AZERTY FR 701975-051	701975-051	2
3761610	HP	HP KEYBOARD AZERTY FR 701979-051	701979-051	1
3761609	HP	HP KEYBOARD AZERTY FR 701982-051	701982-051	1
3761608	HP	HP KEYBOARD AZERTY FR 701986-051	701986-051	5
3762167	HP	HP KEYBOARD AZERTY FR 702651-051	702651-051	1
3761611	HP	HP KEYBOARD AZERTY FR 703915-051	703915-051	2
3761615	HP	HP KEYBOARD AZERTY FR 708135-051	708135-051	1
3762176	HP	HP KEYBOARD AZERTY FR 719853-051	719853-051-REF	8
3761165	HP	HP KEYBOARD AZERTY FR 721953-051	721953-051 REF	29
3761166	HP	HP KEYBOARD AZERTY FR 727765-051	727765-051 REF	10
3761601	HP	HP KEYBOARD AZERTY FR 730540-051	730540-051 REF	2
3762166	HP	HP KEYBOARD AZERTY FR 730794-051	730794-051	3
3761602	HP	HP KEYBOARD AZERTY FR 738687-051	738687-051	1
3762177	HP	HP KEYBOARD AZERTY FR 738697-A41	738697-A41-REF	2
3762320	HP	HP KEYBOARD QWERTY 697685-041	697685-041	1
3762322	HP	HP KEYBOARD QWERTY 9Z.NCGSQ.500	9Z.NCGSQ.500	1
3762106	HP	HP KEYBOARD QWERTY GRE 749658-151	749658-151	1
3761153	HP	HP KEYBOARD QWERTY ITA 641181-061	641181-061	1
3761154	HP	HP KEYBOARD QWERTY ITA 701986-061	701986-061	2
3761155	HP	HP KEYBOARD QWERTY ITA 727682-031	727682-031	7
3761150	HP	HP KEYBOARD QWERTY NORDIC 432976-DH1	432976-DH1	1
3761160	HP	HP KEYBOARD QWERTY PK1303X0500 9J.NOL82.101	PK1303X0500-9J.NOL8	1
3761142	HP	HP KEYBOARD QWERTY Swiss 483010-BG1	483010-BG1	1
3761141	HP	HP KEYBOARD QWERTY US 361184-001	361184-001	4
3761159	HP	HP KEYBOARD QWERTZ 468778-BG1	468778BG1	5
3761157	HP	HP KEYBOARD QWERTZ 468778-BG1	468778-BG1	5
3762335	ACER	ACER KEYBOARD AZERTY 90.4CH07.S1A	90.4CH07.S1A	1
3762323	ACER	ACER KEYBOARD AZERTY 9J.N8782.31A	9J.N8782.31A	1
3762504	ACER	ACER KEYBOARD AZERTY AEZR6F00010 ZR6 REV.3A	AZER6F00010 ZR6 REV	3
3762340	ACER	ACER KEYBOARD AZERTY MP-09G33U4-528	MP-09G33U4-528	1
3762324	ACER	ACER KEYBOARD AZERTY NSK-AF31A	NSK-AF31A	1
3762506	ACER	ACER KEYBOARD AZERTY NSK-AFC3D	NSK-AFC3D	1
3762505	ACER	ACER KEYBOARD AZERTY NSK-H361A	NSK-H361A	2
3762332	ACER	ACER KEYBOARD QWERTY KBINT00105	KBINT00105	1
3762502	ACER	ACER KEYBOARD QWERTY MP-04653U4-6982	MP-04653U4-6982	4
3762499	ACER	ACER KEYBOARD QWERTY MP-07A13U4-4421	MP-07A13U4-4421	3
3762501	ACER	ACER KEYBOARD QWERTY NSK-AFE1D	NSK-AFE1D	2
3762500	ACER	ACER KEYBOARD QWERTY NSK-AGL1D	NSK-AGL1D	1
3762508	GATEWAY	ACER KEYBOARD QWERTY NSK-AUG1D	NSK-AUG1D	1
3762328	ACER	ACER KEYBOARD QWERTY NSK-H351D	NSK-H351D	3
3762503	ACER	ACER KEYBOARD QWERTY NSK-H353D	NSK-H353D	3
3762334	ACER	ACER KEYBOARD QWERTY PK13ZHU01R0	PK13ZHU01R0	1
3762356	LENOVO	LENOVO KEYBOARD AZERTY BE 04Y2416	04Y2416	1
3762355	LENOVO	LENOVO KEYBOARD AZERTY BE 04Y2494	04Y2494	1
3762359	LENOVO	LENOVO KEYBOARD QWERTY BE 45N2193	45N2193	1
3765242	ACER	LENOVO THINKPAD E531 LCD INVERTER CABLE	DC02001LH00	1
3762361	MEDION	MEDION KEYBOARD AZERTY BE 90.4MX07.U1A	90.4MX07.U1A	1
3762346	PACKARD BELL	PACKARD BELL KEYBOARD AZERTY MP-03756B0	MP-03756B0	1